

STARTER RELAY

ON-VEHICLE INSPECTION

- 1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
- 2. **REMOVE STARTER RELAY (Marking: ST)**
(a) Remove the starter relay from the No. 7 relay block.
- 3. **INSPECT STARTER RELAY (Marking: ST)**
(a) Measure the resistance of the relay.

Standard resistance

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the resistance is not as specified, replace the relay.

- 4. **INSTALL STARTER RELAY (Marking: ST)**
- 5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

